


THE MECHANICAL FALLACY

ENGINEERING FAILURES INJECTED OUT OF SIGHT

THE CORPORATE TRENCHLESS PITCH PROMISES A UNIVERSAL CURE.

THE ENGINEERING REALITY IS FAR DIFFERENT.

A CIPP LINER IS A FLEXIBLE SLEEVE WITH NO INDEPENDENT STRUCTURE. IT TAKES THE SHAPE, THE SLOPE, AND THE DEFECTS OF THE HOST PIPE IT IS FORCED TO LINE-PERMANENTLY LOCKING PROBLEMS IN PLACE INSTEAD OF SOLVING THEM.

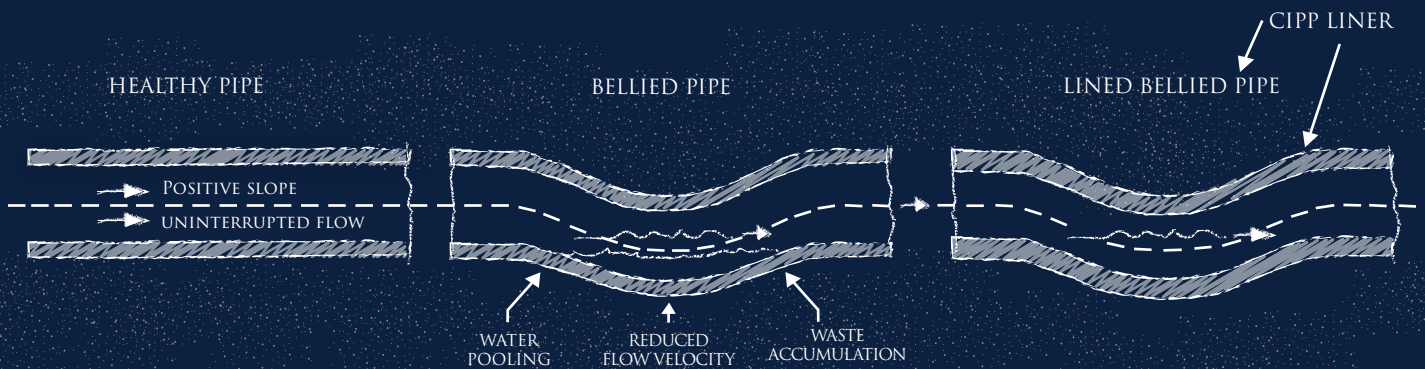



A LINER DOES NOT CORRECT ENGINEERING FAILURES.
IT PERMANENTLY COPIES THEM.

THE INCURABLE BELLY

HYDRAULIC SAGS

OVER TIME, SOIL MOVEMENT, POOR COMPACTION, AND SETTLEMENT CREATE LOW SPOTS WITHIN SEWER LINES KNOWN AS "BELLIES." BECAUSE CIPP LINERS CURE AGAINST THE HOST PIPE USING AIR OR WATER PRESSURE, THEY REPRODUCE THE EXACT DEFECT RATHER THAN CORRECTING IT.

THE STANDING WATER REMAINS. SOLIDS CONTINUE TO SETTLE. THE SYSTEM REMAINS DEPENDENT ON MECHANICAL INTERVENTION.

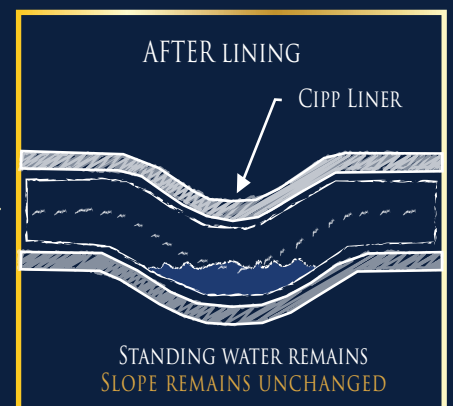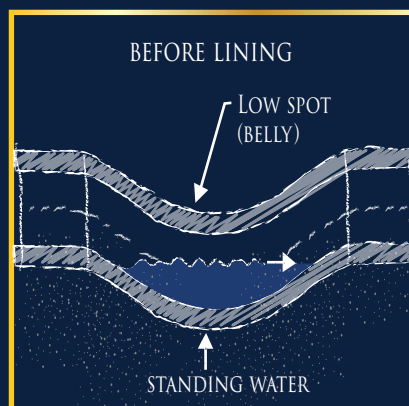

STANDING
WATER



REDUCED FLOW
VELOCITY



INCREASED DEBRIS
BUILD-UP



NO SLOPE
CORRECTION

WHEN A LINER CAN'T FIX THE PROBLEM

TRENCHLESS PIPE LINING IS OFTEN PRESENTED AS A MODERN SOLUTION FOR RESTORING DAMAGED SEWER LINES WITHOUT THE DISRUPTION OF TRADITIONAL EXCAVATION. IN THE RIGHT CONDITIONS, LINING CAN PROVIDE A NEW INTERIOR SURFACE AND HELP ADDRESS DETERIORATION WITHIN AN EXISTING PIPE. HOWEVER, THERE IS AN IMPORTANT LIMITATION: A LINER CAN ONLY FOLLOW THE STRUCTURE THAT IS ALREADY THERE.

WHEN THE ORIGINAL SEWER LINE HAS DEVELOPED A BELLY, IMPROPER SLOPE, DEFORMATION, OR LOSS OF GRADE, THE PROBLEM IS NO LONGER LIMITED TO THE CONDITION OF THE PIPE WALL. IT HAS BECOME A MECHANICAL AND STRUCTURAL ISSUE.

A FLEXIBLE LINER INSTALLED INSIDE THAT PIPE CONFORMS TO ITS EXISTING SHAPE. IT DOES NOT PHYSICALLY RAISE A LOW SECTION, RESTORE THE ORIGINAL SLOPE, STRAIGHTEN A DEFORMED PIPE, OR CORRECT THE SURROUNDING SOIL CONDITIONS THAT ALLOWED THE PIPE TO MOVE.

THE PROBLEM REMAINS BENEATH THE LINER

A SEWER BELLY CREATES A LOW POINT WHERE WASTEWATER CAN COLLECT INSTEAD OF CONTINUOUSLY MOVING TOWARD THE MAIN SEWER LINE. AS WATER SLOWS IN THIS AREA, TOILET PAPER, GREASE, WASTE, AND OTHER SOLIDS HAVE MORE OPPORTUNITY TO SETTLE.

OVER TIME, THIS ACCUMULATION CAN CONTRIBUTE TO REDUCED FLOW, RECURRING BLOCKAGES, STANDING WATER, AND REPEATED SERVICE CALLS. EVEN AFTER LINING, THE INTERIOR MAY LOOK SMOOTHER AND NEWER, BUT THE FUNDAMENTAL GEOMETRY OF THE SYSTEM REMAINS UNCHANGED. THE LOW POINT IS STILL A LOW POINT. THE INCORRECT SLOPE IS STILL INCORRECT.


A NEW PIPE SURFACE DOES NOT AUTOMATICALLY MEAN A CORRECTED PIPE SYSTEM.

STRUCTURAL OBSTRUCTIONS

WHEN PIPES EXPERIENCE SHEAR FAILURES, OFFSET JOINT FAILURE JOINTS BREAK AND DROP, CREATING SHARP OFFSETS. FORCING A RESIN-SATURATED LINER THROUGH THESE OFFSETS CAUSES THE MATERIAL TO BUNCH, FOLD, AND WRINKLE.

THESE HARDENED RIDGES ACT AS MINIATURE DAMS INSIDE THE FLOW PATH, SNAGGING TOILET PAPER, ORGANIC SOLIDS, AND OTHER DEBRIS-CONVERTING A "REHABILITATED" PIPE INTO A CHRONIC BLOCKAGE POINT.

IF THE HOST PIPE IS ALREADY DEFORMED (OVALITY OR "EGGING"), THE ADDED LINER THICKNESS FURTHER REDUCES INTERNAL DIAMETER AND HYDRAULIC CAPACITY.

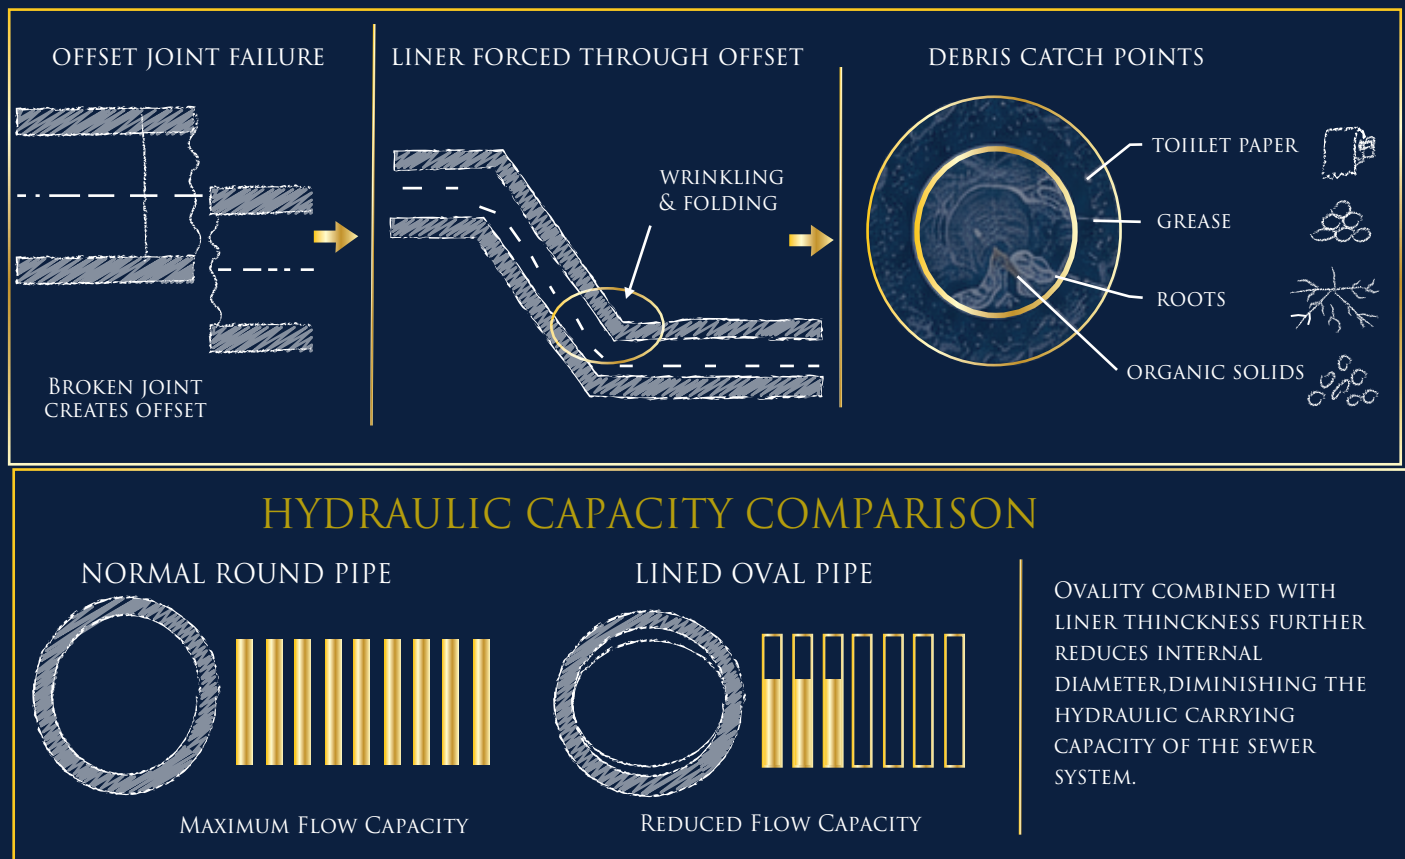

JOINT OFFSETS & PIPE DEFORMATION

WHEN PIPE GEOMETRY BECOMES PART OF THE BLOCKAGE

A PROPERLY FUNCTIONING SEWER SYSTEM DEPENDS ON MUCH MORE THAN HAVING AN OPEN PIPE. DIAMETER, SLOPE, ALIGNMENT, JOINT CONDITION, AND INTERNAL GEOMETRY ALL INFLUENCE HOW EFFICIENTLY WASTEWATER AND SOLIDS TRAVEL THROUGH THE SYSTEM.

WHEN AN EXISTING SEWER PIPE SHIFTS, SEPARATES, SETTLES, CRACKS, OR BECOMES DEFORMED, ITS ORIGINAL FLOW PATH CAN CHANGE DRAMATICALLY.

OFFSET JOINTS CAN CREATE ABRUPT STEPS INSIDE THE LINE. A PIPE AFFECTED BY OVALITY OR “EGGING” CAN LOSE PART OF ITS USABLE INTERNAL DIAMETER. SECTIONS THAT HAVE SHIFTED BECAUSE OF SOIL MOVEMENT CAN ALSO CREATE IRREGULAR TRANSITIONS THAT INTERRUPT THE SMOOTH MOVEMENT OF WASTEWATER.

THESE STRUCTURAL CHANGES MAY ALREADY RESTRICT THE SYSTEM BEFORE ANY REHABILITATION BEGINS.


WHEN THE LINER FOLLOWS THE FAILURE

A FLEXIBLE LINER INSTALLED THROUGH A STRUCTURALLY COMPROMISED PIPE MUST CONFORM TO THE PATHWAY AVAILABLE TO IT.


AT AN OFFSET JOINT, THE LINER MAY BE FORCED THROUGH A SHARP TRANSITION. IN A DEFORMED OR OVAL PIPE, IT FOLLOWS THE REDUCED SHAPE OF THE HOST PIPE. DEPENDING ON THE EXISTING CONDITION, THESE AREAS CAN CREATE FOLDS, WRINKLES, OR ADDITIONAL CHANGES IN THE INTERNAL FLOW PATH.

THE LINER ITSELF ALSO OCCUPIES SPACE INSIDE THE EXISTING PIPE. WHEN THE ORIGINAL DIAMETER HAS ALREADY BEEN REDUCED BY DEFORMATION, ADDING ANOTHER LAYER CAN FURTHER AFFECT THE AVAILABLE HYDRAULIC CAPACITY.

THE WATER SLAB BREAK

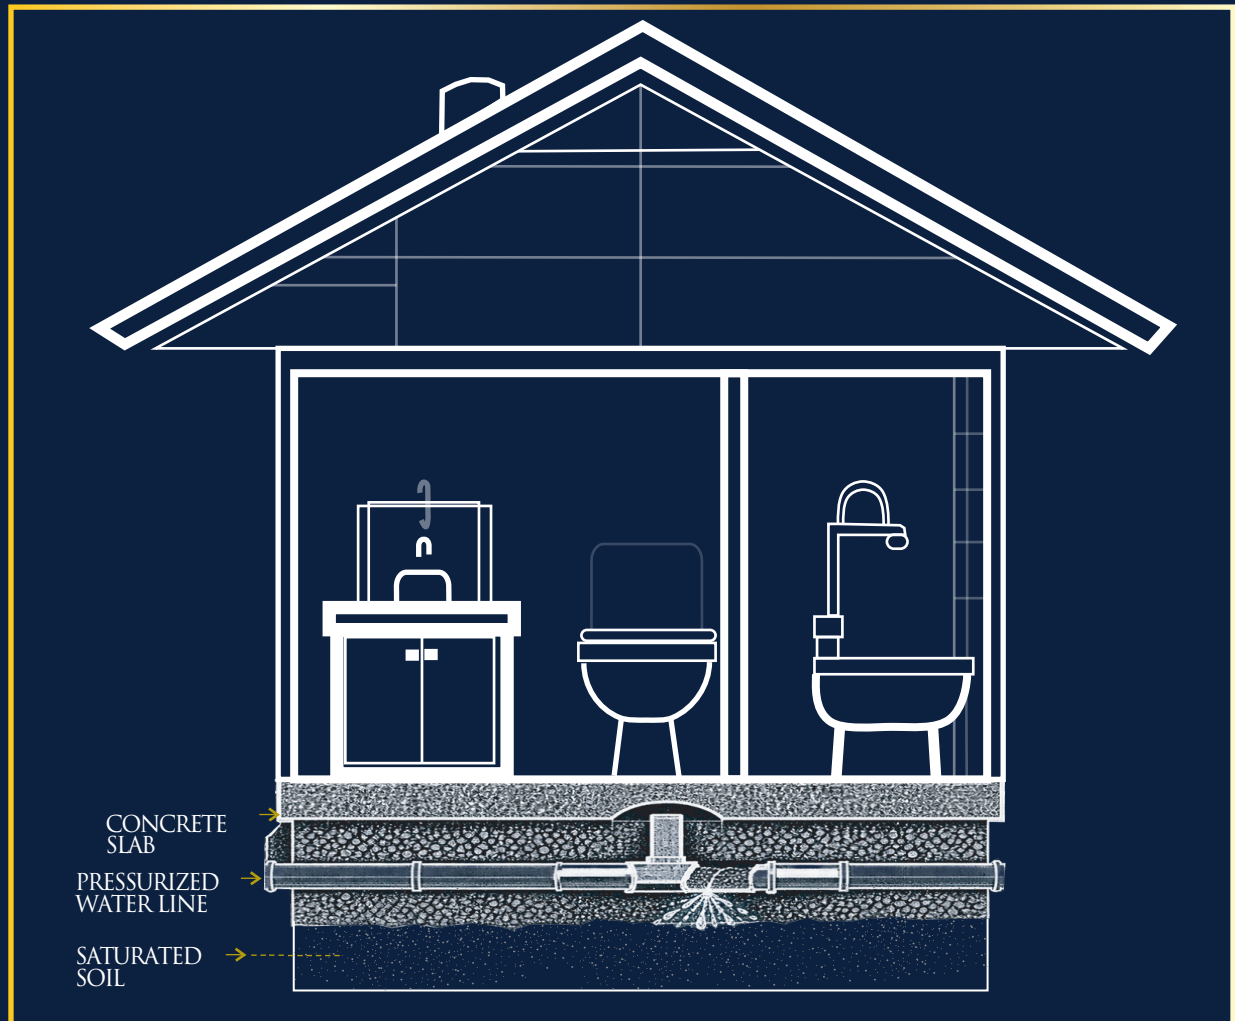

The leak you can't see can do the most damage.

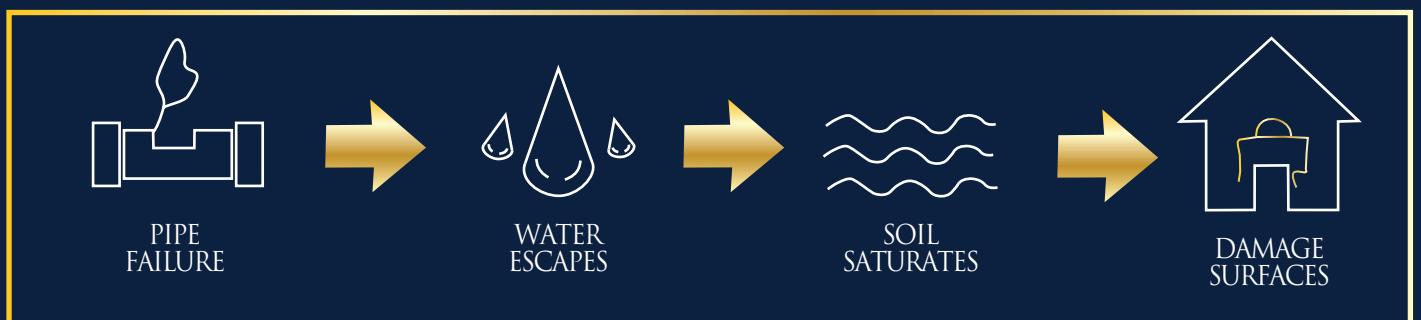

WHEN A HIDDEN LEAK BECOMES A BIGGER PROBLEM

SOME OF THE MOST DAMAGING PLUMBING PROBLEMS BEGIN WHERE HOMEOWNERS CANNOT SEE THEM BENEATH THE CONCRETE FOUNDATION.

A SLAB LEAK OCCURS WHEN A PRESSURIZED WATER LINE LOCATED BELOW OR WITHIN THE SLAB BEGINS TO LEAK. BECAUSE THE FAILURE IS HIDDEN UNDERNEATH THE HOME, WATER CAN ESCAPE FOR AN EXTENDED PERIOD BEFORE OBVIOUS SIGNS APPEAR AT THE SURFACE.

UNLIKE A LEAKING FAUCET OR AN EXPOSED PIPE, THERE MAY BE NO IMMEDIATE PUDDLE SHOWING EXACTLY WHERE THE PROBLEM IS LOCATED. INSTEAD, THE ESCAPING WATER CAN MOVE THROUGH THE SOIL BENEATH THE FOUNDATION, SPREADING BEYOND THE ORIGINAL POINT OF FAILURE.

WHAT HAPPENS BELOW THE SLAB?


ONCE A PRESSURIZED WATER LINE FAILS, WATER CONTINUOUSLY ESCAPES INTO THE SURROUNDING MATERIAL. THE SOIL BENEATH THE SLAB CAN GRADUALLY BECOME SATURATED, ALLOWING MOISTURE TO MIGRATE INTO AREAS FAR FROM THE ACTUAL LEAK.

THIS IS WHAT MAKES SLAB LEAKS PARTICULARLY DECEPTIVE. THE PLACE WHERE DAMAGE BECOMES VISIBLE MAY NOT BE THE PLACE WHERE THE PIPE ACTUALLY FAILED.

OVER TIME, HOMEOWNERS MAY BEGIN NOTICING UNEXPLAINED CHANGES THROUGHOUT THE PROPERTY: WARM OR DAMP AREAS ON THE FLOOR, UNUSUAL SOUNDS OF RUNNING WATER, REDUCED WATER PRESSURE, UNEXPECTED INCREASES IN WATER USAGE, OR MOISTURE APPEARING AROUND FLOORING AND WALLS.

WHAT APPEARS TO BE A FLOORING OR MOISTURE PROBLEM AT THE SURFACE MAY ACTUALLY ORIGINATE SEVERAL INCHES OR SEVERAL FEET AWAY BENEATH THE CONCRETE.

THE WARNING SINGS DON'T IGNORE THE CLUES

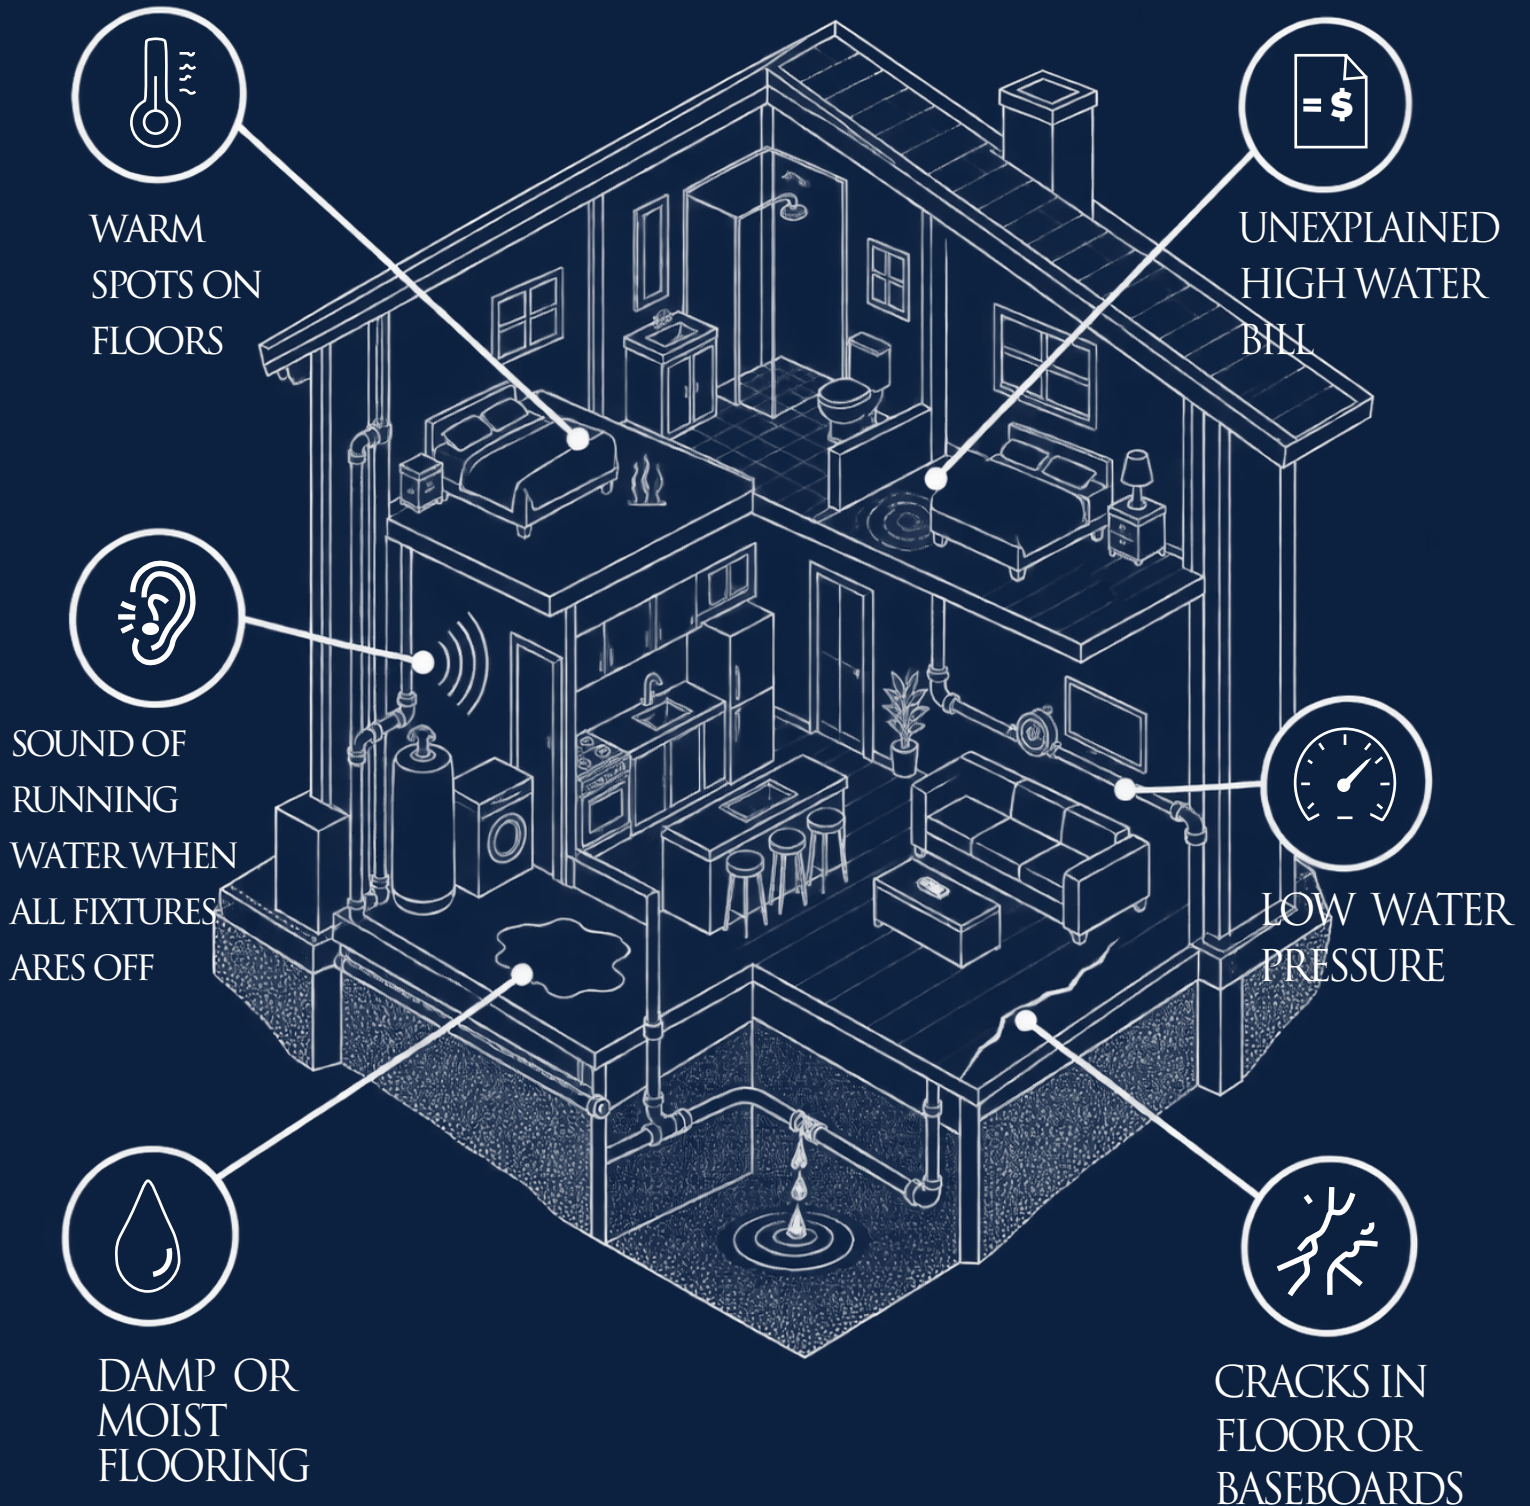

WHAT YOUR HOME MAY BE TELLING YOU

SLAB LEAKS ARE DIFFICULT TO DETECT BECAUSE THE DAMAGED PIPE IS HIDDEN BENEATH THE CONCRETE FOUNDATION. INSTEAD OF SEEING THE LEAK ITSELF, HOMEOWNERS OFTEN NOTICE SMALL CHANGES THROUGHOUT THE HOME.

INDIVIDUALLY, THESE SIGNS MAY HAVE OTHER CAUSES. BUT WHEN SEVERAL APPEAR TOGETHER, THEY MAY INDICATE WATER ESCAPING FROM A PRESSURIZED LINE BENEATH THE SLAB.

CHANGES YOU CAN FEEL

A LEAKING HOT-WATER LINE CAN TRANSFER HEAT THROUGH THE CONCRETE, CREATING UNUSUALLY WARM AREAS ON THE FLOOR. ESCAPING WATER CAN ALSO MIGRATE THROUGH THE SLAB AND SURROUNDING MATERIALS, RESULTING IN DAMP OR MOIST FLOORING.

THESE SYMPTOMS MAY APPEAR AWAY FROM THE ACTUAL PIPE FAILURE BECAUSE WATER CAN TRAVEL BENEATH THE FOUNDATION BEFORE REACHING THE SURFACE.

CHANGES YOU CAN HEAR

THE SOUND OF RUNNING WATER WHEN ALL FIXTURES ARE OFF CAN BE AN IMPORTANT WARNING SIGN. BECAUSE SUPPLY LINES REMAIN PRESSURIZED, A DAMAGED PIPE MAY CONTINUE RELEASING WATER EVEN WHEN NO FAUCET OR APPLIANCE IS BEING USED.

CHANGES YOU CAN MEASURE

AN UNEXPECTED INCREASE IN THE WATER BILL OR A NOTICEABLE DROP IN WATER PRESSURE MAY ALSO INDICATE THAT WATER IS ESCAPING SOMEWHERE WITHIN THE SYSTEM.


WHEN HOUSEHOLD WATER USAGE HAS NOT CHANGED BUT THE BILL HAS, THE MISSING WATER MAY BE GOING SOMEWHERE YOU CANNOT SEE.

HOW NATURAL GAS MOVES THROUGH YOUR HOME

LEGEND

— — — — — GAS LINE (INSIDE WALL/CEILING)

————— GAS LINE (UNDERGROUND)

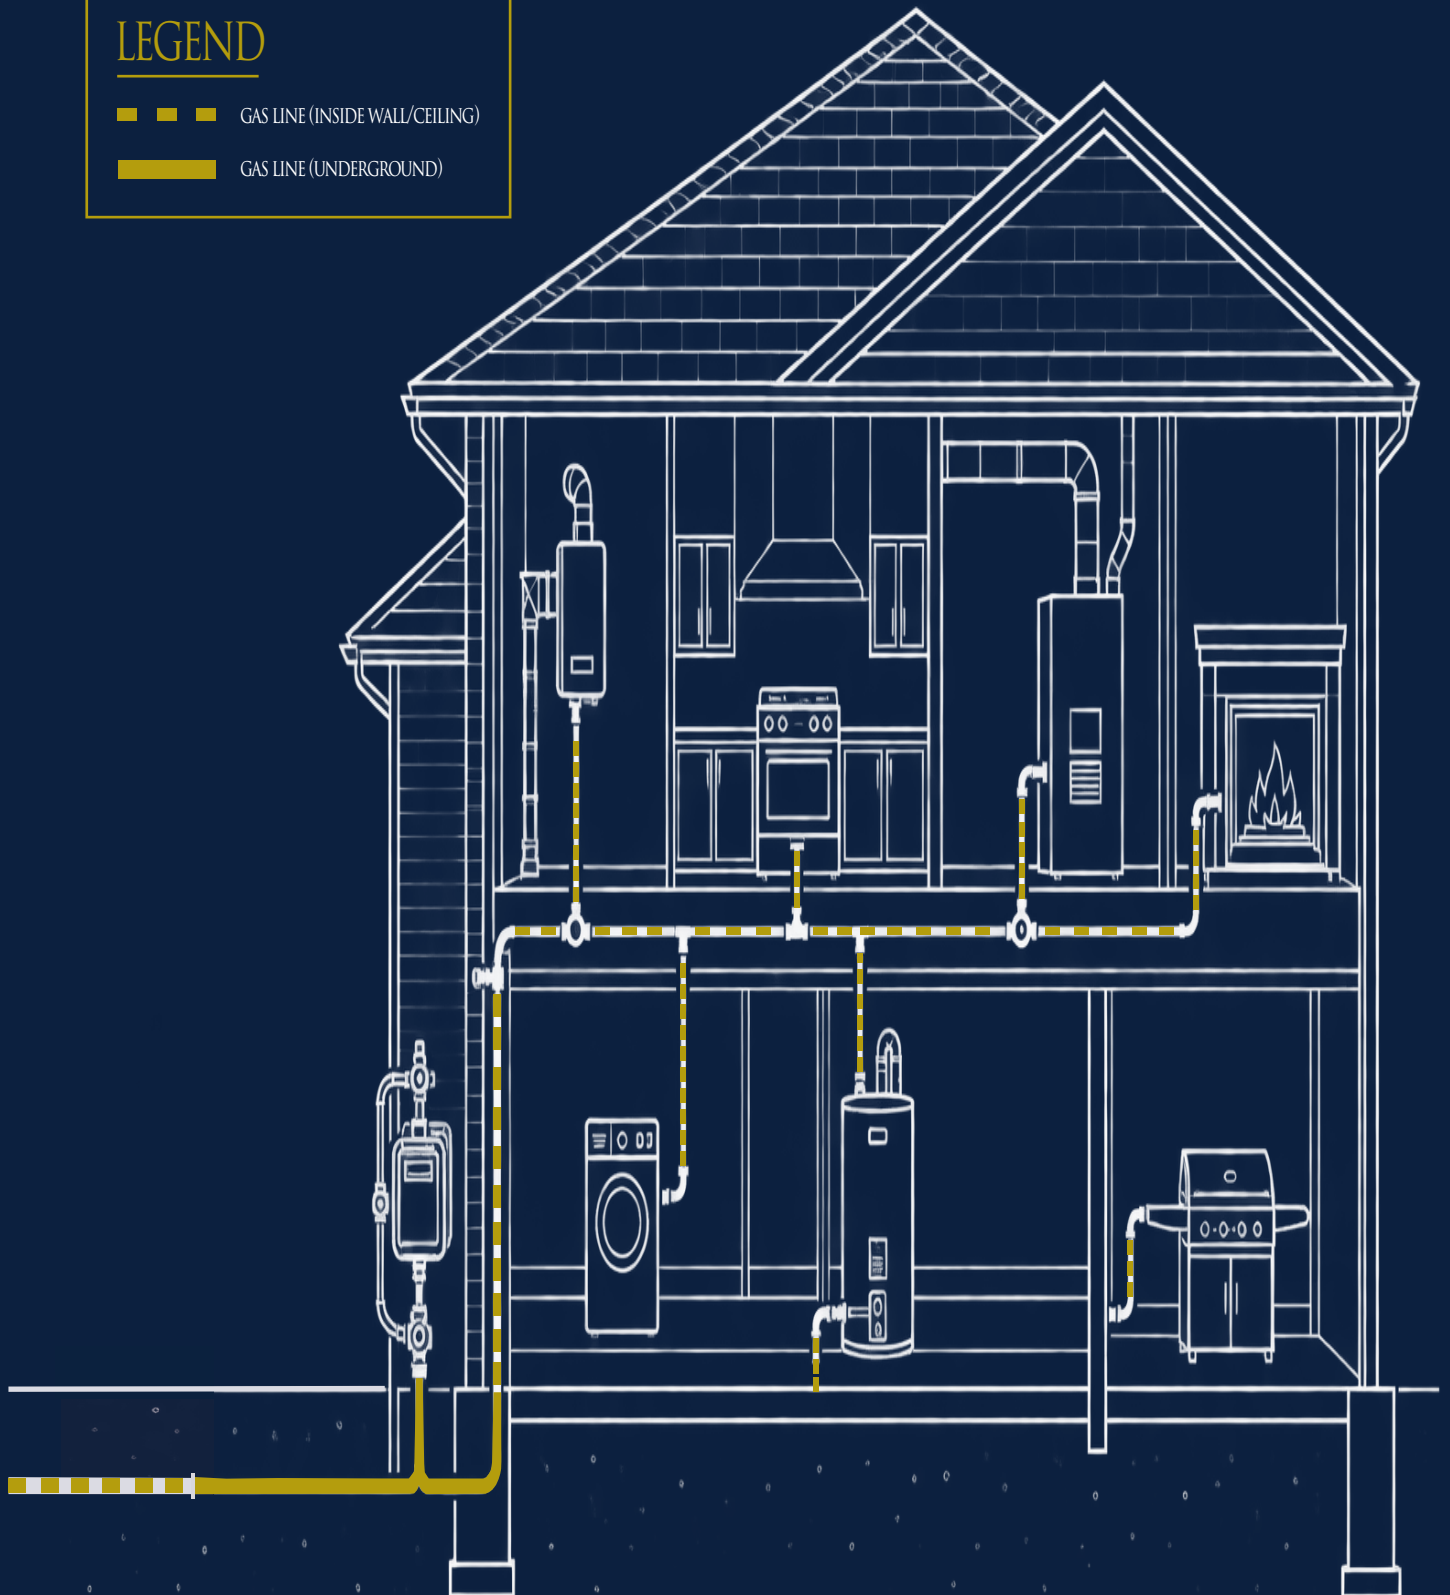

WHERE GAS LEAKS CAN HIDE

NATURAL GAS LINES OFTEN RUN THROUGH AREAS OF A HOME THAT ARE COMPLETELY HIDDEN FROM VIEW. UNDERGROUND PIPING CARRIES GAS FROM THE EXTERIOR METER TOWARD THE STRUCTURE, WHILE INTERIOR LINES TRAVEL THROUGH WALLS, CEILINGS, AND FLOORS TO SUPPLY FURNACES, WATER HEATERS, RANGES, FIREPLACES, DRYERS, AND OTHER GAS-POWERED APPLIANCES.

WHEN ONE OF THESE CONCEALED LINES DEVELOPS A LEAK, THE GAS DOES NOT ALWAYS REMAIN NEAR THE DAMAGED PIPE. UNDERGROUND GAS CAN MIGRATE THROUGH SOIL, GRAVEL, UTILITY TRENCHES, AND SMALL FOUNDATION OPENINGS, SOMETIMES ENTERING THE HOME FAR FROM THE ACTUAL SOURCE OF THE LEAK. INSIDE WALLS, ESCAPING GAS MAY BECOME TRAPPED WITHIN ENCLOSED CAVITIES, WHERE IT CAN ACCUMULATE WITHOUT BEING IMMEDIATELY NOTICED.

UNDERGROUND GAS LEAKS

UNDERGROUND GAS LINES CAN BE AFFECTED BY SHIFTING SOIL, CORROSION, HEAVY SURFACE LOADS, IMPROPER INSTALLATION, OR GROUND MOVEMENT. WHEN A BURIED LINE LEAKS, GAS CAN TRAVEL THROUGH SOIL, GRAVEL, AND UTILITY TRENCHES INSTEAD OF RISING DIRECTLY ABOVE THE DAMAGED PIPE.

THIS MEANS GAS MAY ENTER THROUGH FOUNDATION CRACKS, PIPE PENETRATIONS, OR OTHER OPENINGS, MAKING THE ACTUAL SOURCE DIFFICULT TO LOCATE.

INSIDE GAS LEAKS

GAS LINES RUNNING THROUGH WALLS, CEILINGS, FLOORS, AND FRAMING CAVITIES SUPPLY APPLIANCES THROUGHOUT THE HOME. LEAKS CAN DEVELOP FROM DAMAGED PIPING, LOOSE CONNECTIONS, DETERIORATED JOINTS, OR ACCIDENTAL PUNCTURES DURING RENOVATIONS.

BECAUSE THESE AREAS ARE ENCLOSED, ESCAPING GAS CAN ACCUMULATE INSIDE HIDDEN SPACES AND CREATE A SERIOUS FIRE OR EXPLOSION HAZARD IF IT REACHES AN IGNITION SOURCE.



EDUCATIONAL FOUNDATION

